

 
# Finding Programs On Satellite TV

Make sure your remote is in SAT mode by pressing the **SAT Mode** button




## Three easy ways to find the program you want to watch

1. Use the **UP/DOWN ARROW** buttons to change the channel up or down one channel at a time



OR

 2. Use the Number buttons to enter a channel number

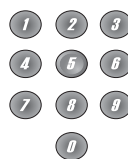

OR

3. Use the **GUIDE** button to display the Program Guide

GUIDE

 


The Program Guide shows you current and future program listings.



Then...

Use the **ARROW** or **PAGE UP/DOWN** buttons to highlight a program and then press the **SELECT** button

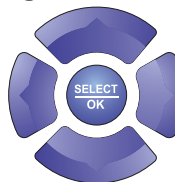


**Tip:** HD programs can be found between **9420-9499** in the program guide.

**Note:** If you select a program that is not currently broadcasting, you will have the option to set up a timer.

Pressing the **GUIDE** button repeatedly cycles through your Favorites Lists (see *User's Guide*).

**Tip:** To skip ahead a specific amount of hours in the guide, enter the number of hours with the number buttons, then immediately press the **RIGHT ARROW** button. For example, pressing the **3** button then the **RIGHT ARROW** will move ahead 3 hours in the guide.

 **Tip:** While viewing a program, press the **BROWSE** (**RIGHT ARROW**) button. Then press either the **UP** or **DOWN ARROW**. The information on other channels appear in the Browse Banner. Press **SELECT** to watch the program.

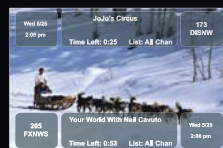

**Tip:** Press the **THEMES** (**LEFT ARROW**) button to bring up the Theme Categories menu which allows you to search for a program based on its content.




# Quick Tip Q & A



 What should I do if I have a snowy picture (or a blue or black screen)?

Check to make sure your HDTV is tuned to the correct input. You may need to cycle through your available inputs using the SD/HD INPUT button. Confirm your resolution setting matches what is written in the *Watching Satellite/HD Programming* section of this guide.



What is the PIP button for?

This feature does not apply to your receiver, but can be used with some TVs with this feature.



What should I do if my remote control doesn't seem to work?

- Try pressing the SAT Mode button.
- Make sure the remote UHF antenna is attached to the back of the receiver.
- Your remote control batteries may need to be replaced (alkaline batteries are recommended).
- Check the remote address (see *User's Guide*).



 
Why does my receiver change channels and do things on its own?

You may have a neighbor that also has a UHF remote and their remote may be controlling your receiver. This is easily corrected by changing your remote control address. See your *User's Guide* for instructions.



What would affect my satellite signal?

There may be obstructions in front of your satellite dish. Sometimes new tree or plant growth can obstruct the signal between the satellite and the dish. If you are experiencing frequent signal interruptions, leave your TV on and press the SYSTEM INFO button on the front of the receiver. Contact Customer Service using the phone number shown on the System Information screen.



What are the benefits of my satellite receiver being connected to a telephone line?

Keeping your phone line connected enables you to take advantage of interactive TV services, the Customer Support Application, or Caller ID applications. It will also allow you to use your remote control to order Pay-Per-View events or movies.



Why does my High Definition picture seem distorted?

You may need to adjust the format of the picture to match the program you are viewing. Press the FORMAT button on your remote to cycle through the available picture formats.



 
Why don't some programs on high definition channels look like high definition?

Some programming on high definition channels was originally produced before high definition technology. Therefore, these programs will be displayed in a lower resolution.



Why don't all of my channels show up on the Program Guide or when I browse?

You may have a Favorites List active that does not include those channels. Repeatedly press the GUIDE button and cycle through the Favorites Lists until you find a list that contains those channels. Also check to see if those channels are locked (see *User's Guide*).



Can the Program Guide display program information for my off-air local channels?

For information to be displayed, you must subscribe to the DISH Network local programming package (if available).

**Tip:** To ensure your receiver has the latest program guide information and the latest software updates, press the **POWER** button to turn your receiver off when not in use.



**Tip:** Some receiver problems can be solved by pressing and holding the **POWER** button on the front of the receiver for about 10 seconds until the green light goes out. After releasing the **POWER** button, the receiver should return to normal operation within a few minutes.

# QUICK REFERENCE GUIDE

## High Definition Satellite Receiver

Look inside for important tips to operate your satellite receiver



## Channel Directory

ABC Family Channel	180	Food Network	110	Outdoor channel, The	153
American Movie Classics	130	FOX Movie Channel	133	PAX TV	181
America's Preview Channel	221	FOX News Channel	205	QVC	226
Angel One	262	Fox Reality	190	Resort and Residence Channel	216
Animal Planet	184	FOX Soccer	149	Sci-Fi Channel	122
Arts & Entertainment (A&E)	118	Fuse	158	Science Channel, The	193
BBC America	135	FX	137	Shop at Home	224
BET	124	G4	191	ShopNBC	228
Beauty & Fashion Channel	225	Galavisión	833	SiTV	159
Biography Channel, The	119	GSN	116	SoapNet	188
Bloomberg TV	203	Go!TV	407	Speed Channel	150
Boomerang	175	Golf Channel, The	401	Spike TV	168
Bravo	129	Great American Country	167	Style	115
Cartoon Network	176	Hallmark Channel	185	TBN	260
CCTV-9	265	Headline News	202	TBS	139
CNBC	208	Healthy Living Channel	223	TeleFutura (East)*	830
CNBC World	207	History Channel, The	120	TeleFutura (West)*	831
CNN	200	History Channel International	121	TNT	138
CSTV	152	Home & Garden TV	112	Toon Disney	174
Comedy Central	107	HorseRacing TV	404	Travel Channel	215
Country Music Television	166	HSN	222	Turner Classic Movies	132
Court TV	204	Independent Film Channel	131	TV Games	405
C-SPAN	210	iDriveTV	217	TV Guide Channel	102
C-SPAN2	212	iShop	229	TV Land	106
Discovery Channel	182	International Music Feed	157	TV Outlet Mall	219
Discovery Health	189	Jewelry Television	227	Univisión (East)	827
Discovery Home & Leisure	194	KBS World	9850	Univisión (West)	828
Discovery Kids	179	Learning Channel, The	183	USA Network	105
Discovery Times	192	Lifetime	108	VH1	162
Disney Channel (East)	172	Lifetime Movie Network	109	VH1 Classic	163
Disney Channel (West)	173	Men's Channel	218	Weather Channel, The	214
Do It Yourself (DIY)	111	Military Channel	195	WGN	239
E! Entertainment	114	Movie Channel, The (West)	329	WE: Women's Entertainment	128
Encore (West)	341	Movie Channel Extra, The (West)	330		
Encore Action	343	MSNBC	209		
Encore Drama	345	MTV	160		
Encore Love	346	MTV2	161		
Encore Mystery	344	Mun2	838		
Encore WAM	347	NASA	213		
Encore Westerns	342	National Geographic	186		
ESPN	140	NFL Network	154		
ESPN2	144	Nickelodeon Games & Sports	177		
ESPN Classic	143	Nickelodeon/Nick at Nite (East)	170		
ESPNNews	142	Nickelodeon/Nick at Nite (West)	171		
ESPNU	148	Nicktoons	178		
EWTN	261	NOGGIN/The N	169		

\* FREE Spanish audio feed available. Audio disponible en español.  
† CCTV-9 requires DISH 500, DISH 1000 or SuperDISH antenna. KBS World requires SuperDISH antenna pointed at 121° orbital location and subscription to qualifying programming. Additional fees may apply for new and existing DISH Network customers to upgrade their dish antenna.  
\* TeleFutura East is available to subscribers in the Eastern and Central time zones. TeleFutura West is available to subscribers in the Mountain and Pacific time zones.

## Movie Packages

<b>HBO</b>		<b>Starz (East)</b>	350	<b>SHOWTIME UNLIMITED</b>	
HBO (East)	300	Starz (West)	351	FLIX	333
HBO (West)	303	Starz Cinema (East)	353	Movie Channel, The (East)	327
HBO 2 (East)	301	Starz Cinema (West)	354	Movie Channel Extra, The (East)	328
HBO 2 (West)	304	Starz Kids & Family	356	Showtime Too	320
HBO Comedy	307	Starz Edge	352	Showtime (East)	318
HBO Family	305			Showtime (West)	319
HBO Latino	309			Showtime Beyond	323
HBO Signature	302	<b>CINEMAX</b>		Showtime Extreme	322
HBO HDTV**	9456	5 Star Max	314	Showtime Showcase	321
		Action Max	313	Sundance Channel	332
		Cinemax (East)	310	Showtime HD**	9460
		Cinemax (West)	311		
		MoreMAX	312		
<b>STARZ!</b>					
Starz in Black	355				
Encore (East)	340				

\*\* Requires HD monitor and HD receiver.  
† FREE Spanish audio feed available. Audio disponible en español.

## High Definition Programming

<b>HD PAK</b>		<b>ADDITIONAL HD CHANNELS</b>		<b>VOOM HD PACK</b>	
HDNet	9422	CBS HD (East)	9483	Animania HD	9474
HDNet Movies	9423	CBS HD (West)	9484	Equator HD	9471
ESPN HD	9424	HBO HD	9456	Gallery HD	9472
Discovery HD Theater	9421	Showtime HD	9460	Guy TV HD	9479
TNT HD	9420			HD News	9482
				Majestic HD	9480
				Monsters HD	9481
				Rave HD	9470
				Rush HD	9476
				Ultra HD	9478

HD channels require an HD monitor and HD receiver, and may require a second dish antenna. Charges may apply for the second dish antenna.